

Spin Valve for Tires

Order number: TO-02440



Use the spin valve to empty the tires of a vehicle after bringing the vehicle safely to the base. The destruction of the tires that may be to determine the cause of the accident of importance is to be avoided.

length: 12 cm